## **Connector with Cable for Electric Vehicle Fast Charger**

## **CHAdeMO Interface-Connector**

# Small, Big LED, Useful

## Small size

- Only Ø19.3mm of outer diameter of cable\*
- Cable weight 0.5kg per 1.0m\* \*60A version

## User friendly design

- Large and vivid LED illuminating on the body
- Minimum cable bending radius only 116mm\* \*60A version

## **Characteristics**

- Current range: 60A, 100A, and 125A
- Operating ambient temperature : 30 to 50°C
- Compliant to IEC 62916-3: Configuration AA



#### **Specifications**

Rated voltage [V]	DC500					
Rated current [A]	60	100	125			
Insulation resistance $[\Omega]$	100M or more					
Withstand voltage [V]	AC3000 / 1min					
Insertion force [N]	Less than 100					
Temperature rise (at connector)	Housing : Less than 60℃ Terminal: Less than 50deg					
Drop impact	No abnormality after free falling from 1m to concrete					
Water proofing	Disconnected: IP44, While connected: IP56					
Mechanical endurance	No serious damage Terminal temperature rise: 50deg or less					

## 🖊 Japan Energy Components

### Construction

Cable	Rated voltage [V]	(U <sub>0</sub> / U) 600 / 1000			Conductor (Control)
	Conductor	Power	Control	Control	
	Cross sectional area [mm <sup>2</sup> ]	10 25 35	0.75	0.75	Conductor (Control)
	Number of cores	2	7	1 pair	
	Nominal outer diameter* [mm]	(Power conductor) Type 10mm <sup>2</sup> : Ø19.3 Type 25mm <sup>2</sup> : Ø23.6 Type 35mm <sup>2</sup> : Ø25.9			
Connector	Dimension [mm]	L 270 x H 180 x W 81			
	Weight [kg]	approx.1.1 (without cable)			
	Housing	Thermoplastic			
0	Latch	Stainless steel			

\*Depending on cross sectional area[mm<sup>2</sup>] of power, outer diameter of each cable changes.

#### How to Operate

- Connecting to vehicle inlet
- 1. Hold the grip firmly.



JE-CAT-00260(20

2. Insert the connector straight into the inlet by the vehicle side horizontally.



Disconnecting from vehicle inlet
1. Make sure that the LED light 2. Push the release button. turns off before disconnecting.

(1) The back release button down automatically

- (2) "Click" sound after it connected
- (3) The back release button rising automatically



3. Pull the connector straight from the vehicle side inlet horizontally.



#### Japan Energy Components Co., Ltd. https://jecomponents.co.jp/en

